

rose plastic medical packaging GmbH

Secure packaging solutions for medical technology,
dental, healthcare and laboratory

The highest demands are placed on packaging in the medical and healthcare sector today. From maximum protection against product damage in shipping and handling to effectively securing and maintaining the sterile barrier integrity against contamination.

Whenever you need high quality, practical and safe protective packaging, you have found the right place. More information online.

www.rose-medipack.com



PROTECTIVE COVERS



TUBES



BOXES



CASES



STORAGE SYSTEMS



PU-Sleeve 2.0



QuadroPack TPU

Flexible protection for
sharp-edged and abrasive
sensitive products

04/2026

**rose plastic
medical packaging GmbH**

Rupolzer Straße 30
D-88138 Hergensweiler/Lindau
Tel. +49 8388 92345-0
info@rose-medipack.de

www.rose-medipack.com

rose  plastic®
medical packaging

www.rose-medipack.com

rose  plastic®
medical packaging

Easy handling. Efficient loading.

- QuadroPack TPU - the safe packaging for delicate medical devices. Puncture-resistant and highly reliable in protecting sensitive surfaces and sharp instruments.
- Designed for versatility: QuadroPack TPU can be continuously adjusted in length ensuring optimal protection for instruments, implants, and screws across a wide range of sizes and shapes.
- Made from thermoplastic polyurethane (TPU): The material delivers outstanding abrasion resistance and is compatible with various sterilization methods.
- Maximum safety meets full visibility: QuadroPack TPU offers a clear view of the product and provides optimal protection for the sterile barrier.




CLEANROOM PRODUCTION

QuadroPack TPU is manufactured in an ISO Class 8 cleanroom and is designed for sterile applications.

MATERIAL


Thermoplastic polyurethane (TPU).
USP Class VI /
FDA compliant /
biocompatible.

FLEXIBLE MATERIAL

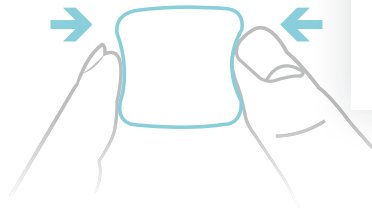


PRODUCT DETAILS

can be found at
www.rose-medipack.com

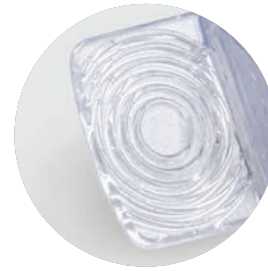

GRIP TAB
for easy opening
and closing

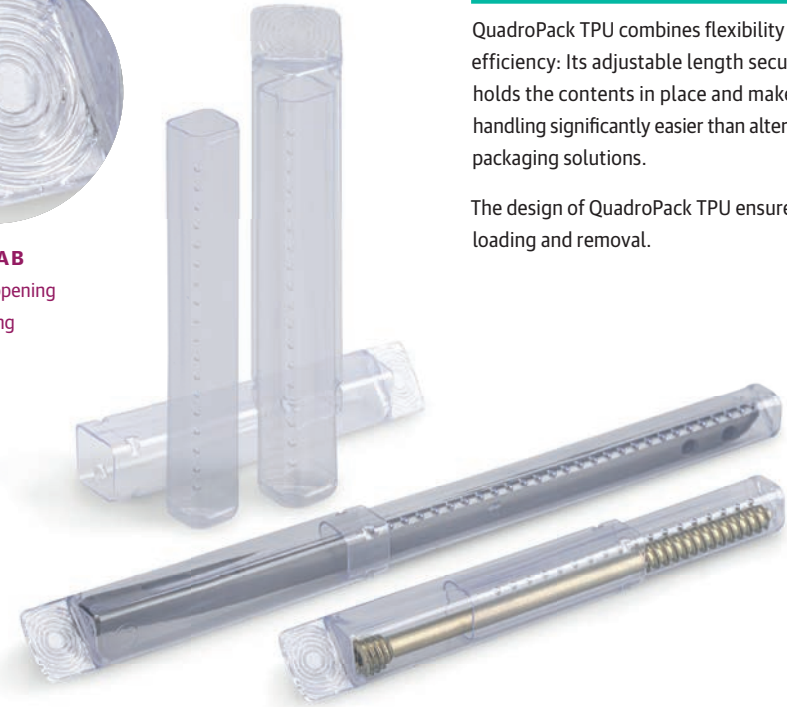

HANDLING NEXT LEVEL


QuadroPack TPU combines flexibility with efficiency: Its adjustable length securely holds the contents in place and makes handling significantly easier than alternative packaging solutions.

The design of QuadroPack TPU ensures easy loading and removal.

The proof of the suitability of the packaging in combination with the medical device to be packed must be provided by the manufacturer.



QuadroPack TPU stands out with its intuitive handling and can be used as primary or secondary packaging.

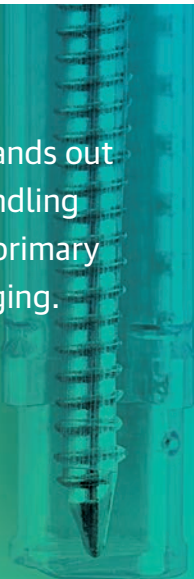

THE ADVANTAGES AT A GLANCE:

- abrasion and puncture resistant
- superior protection for product surfaces
- adjustable length
- TPU-material: USP Class VI / FDA approved / biocompatible
- suitable for gamma and e-beam sterilization
- efficient loading
- excellent protection of the sterile barrier

Product range

Article	Inner-Ø	Usable length
QP TPU 10 050 A	10mm	50mm
QP TPU 10 080 A	10mm	80mm
QP TPU 10 120 A	10mm	120mm
QP TPU 10 050 I	10mm	50mm
QP TPU 10 080 I	10mm	80mm
QP TPU 10 120 I	10mm	120mm

Can be combined individually.
Maximum 200 mm = combination of QP TPU 10 120 A and QP TPU 10 120 I
Up to adjustable length.